

RP60 Quick Start Guide

This guide includes the most basic common settings for the RP60 remotely programmable motor control. For more advanced settings, see the *Quick Reference Programming Guide for RP60*.



To start programming mode

Before you start: place the eye in the eye jack, and be sure the RP60 is disconnected from other RP60s you do not want to program.

- 1 Hold down **Stop** and press **Open 7** and **Close 7** simultaneously.
- 2 Press **Open All**.
The LED light comes on.

To end programming mode

- Press **Stop**.
The LED light goes off.

After starting programming mode

To do this	Press this
Reset all settings to factory default	Open All Hold for 5 seconds
Reset all settings except main channel to factory default	Close All
Set main channel	Close 1, Open N (N = new main channel number)
Set first group channel	Close 2, Open N (N = 1 st group channel)
Set second group channel	Close 3, Open N (N = 2 nd group channel)
Set third group channel	Close 4, Open N (N = 3 rd group channel)
Reverse motor direction	Close 6, Open 2
Change from maintained to momentary motor action	Close 6, Open 1
Change to Fast IR response (use with momentary action)	Close 6, Open 7

LED blinks when command is received

Example:

To set the first group channel to 12

- 1 Hold down **Stop** and press **Open 7** and **Close 7** simultaneously.
- 2 Press **Open All**. The LED light comes on.
- 3 Press **Close 2**.
- 4 Press **Open 12**.
- 5 Press **Stop**.

Main Factory Defaults

Feature	Default setting
Main Channel	Channel 1
Group Channel	None
Motor Action	Maintained
IR Response time	Standard