

## EYB16/EYB25 Type of battery tubular motor instruction

Operation Item	Item	Operation	Result	Illustration
<b>Battery wand:</b> 8pcs Alkaline battery LR6 5# 1.5V 2000mAh <b>EYB16:</b> 0.3Nm/25rpm <b>EYB25:</b> 1.1Nm/25rpm/1.5Nm/28rpm		<b>INSTALLING</b> <ul style="list-style-type: none"> <li>Terminal of motor with "Setting" key on the motor should face toward you</li> <li>Tighten brackets until the motor is horizontal.</li> <li>Fix the battery wand close to the motor</li> <li>Connect the motor with the battery wand.</li> </ul>		<b>Remote transmitter keystroke sketch</b>
<b>NOTICE:</b> <ul style="list-style-type: none"> <li>Motor antenna should be as straight as possible in the position far away from metal objects. Directly contact metal objects is prohibited; otherwise, the receiving distance will be influenced seriously.</li> <li>Please change the total 8pcs Alkaline battery when the motor stop work or work faltering </li> <li>Please replace the transmitter battery in time when the remote transmitter indicator does not shine or the remote-controlling distance evidently become shorter.</li> <li>Please take out the transmitter battery if the transmitter will not be used for a long time.</li> </ul>				
<b>Set lower limit</b>	<b>Primary remote transmitter set motor limit</b>			
	1	Keep pressing "limit" key for 6 seconds	The motor sounds "Ka-Ka-Ka"	
	2	Release the key when the sound disappear.	The motor is under the status of limit setting	
	3	Press "Down" key	The motor should go down continuously	
	4	When the motor is running close to the end-point of lower limit, press "Stop" key on the remote transmitter	The motor stops running	
	5	Press either of the "Up" or the "Down" key	The motor runs step by step to adjust lower limit accurately	
	6	Confirm the setting by pressing the "Confirm" key	The motor sounds "Ka-Ka", the setting has completed.	
<b>Set upper Limit</b>	7	Press "Up" key on the remote transmitter	The motor should go up continuously	
	8	When the motor is running close to the end-point of upper limit, press "Stop" key	The motor stops running	

# BF1500 Series, Installation Instructions (continued)

Operation Item	Item	Operation	Result	Illustration
Set upper Limit	9	Press either of the "Up" or the "Down" key	The motor runs step by step to adjust upper limit accurately	
	10	Confirm the setting by pressing the "Confirm" key	The motor sounds 'Ka-Ka-', the setting has completed.	
Eliminate original setting on motor	<b>Notice: If the manufacturer has programmed remote transmitter and motor before shipment, the user can skip this step and go to the next</b>			
	1	Keep pressing the "Setting" key for 8 seconds	The motor continuous long-sounds "Ka-Ka" then gives out quick short-sounds "Ka-Ka-Ka-Ka"	
	2	Release the key	The recorded remote transmitter has been eliminated.	
Program primary remote transmitter & motor	<b>Notice:</b> ● If the manufacturer has programmed remote transmitter and motors before shipment, the user can skip this step and go to the next. ● The first transmitter match with motor after eliminate original setting operation will be the primary transmitter, primary remote transmitter can set motor limit.			
	1	Keep pressing the "Setting" key for 3 seconds	The motor gives out continuous long-sounds "Ka-Ka"	
	2	Release the key		
	3	Press the "Confirm" key on the transmitter	When the motor gives out quick and short sounds "Ka-Ka"	
	4	Release the key		
Increase Subsequent Remote transmitter	<b>Notice:</b> ● If no need to increase subsequent remote transmitter, please skip this step.			
	1	Keep pressing the "SETTING" key for 3 seconds	The motor sounds "Ka,Ka"	
	2	Release the key		
	3	Press "CONFIRM" key	The motor sounds "Ka,Ka"	
	4	Release the key		
FAQ	<b>If nothing works, please check:</b> ● Whether the battery wand and motor is connected properly and well fixed. <b>If the motor continues running, please check:</b> ● If the motor continues running in a direction, the limit setting is unsuccessful and need to reset again.			