



Kederstar™ Somfy Instructions

INITIAL PROGRAMMING

NOTE:

Only one motor can be plugged in at one time when programming. Once the motor is programmed, it can remain plugged in while programming additional shades.

GO TO STEP 2 IF PROGRAMMING EXTERIOR SHADES.

Step 1. Press the button on the motor head and keep it held down until the shade jogs 3 times (this will set the motor back to factory mode where you can start from the beginning).

Step 2. Press the up and down button on the remote simultaneously until the shade jogs once. (Now we have paired the motor and are ready to begin programming).

Step 3. (Checking polarity) Press the up button. If the shade goes up, go to Step 4. If the shade goes down, press and hold the (my) button until the shade jogs. Once it jogs, this will correct the polarity, and you can go to Step 4.

Step 4. Press the up button until the shade is at the upper limit. Once you're at the upper limit, press and hold the down and (my) buttons simultaneously and the shade will begin going down on its own. (You can release the buttons). When it gets close to the bottom limit, you can stop the shade by pressing the (my) button and then adjust the shade with the up and down button until you reach the desired lower position. Once you have reached the desired lower position, press and hold the up and (my) button simultaneously and the shade will then begin moving upward. (You can release the buttons). The shade will automatically stop at your top limit.

Step 5. Press and hold the (my) button until the shade jogs.

Step 6. Turn the remote around and tap the button on the back until the shade jogs.

*****Programming is complete***.**

If you have any issues with the above steps, you can always start again at Step 1.



Kederstar™ Somfy Instructions *(continued)*

ADDITIONAL PROGRAMMING FUNCTIONS

Programming the Favorite Position.

Step 1. Go to the desired position and hold the (my) button down until it jogs.

Deleting or Modifying the Favorite Position.

Step 1. Go to the current favorite position by pressing the (my) button.

Step 2. Press and hold the (my) button down until the shade jogs. (This deletes the position). Then you can reset by programming it again with the above direction.

*****Adjusting the Upper and Lower Limits*****

To adjust either the lower or upper limit, you must be at the lower or upper limit you want to adjust. Once you are there, follow these steps.

Step 1. Press and hold the up and down buttons simultaneously until the shade jogs.

Step 2. Adjust the shade to your desired limit with the up and down button.

Step 3. Press and hold the (my) button until the shade jogs. Your new limit is now set.

Copying Programming from One Channel to Another. (Example: copying channel 1 to channel 4)

Step 1. Make sure you are on channel 1. Turn the remote around and press the button on the back until the shade jogs.

Step 2. Go to channel 4.

Step 3. Turn the remote around and tap the button on the back and the shade will jog. Do not press and hold the button on the back for this step only tap it).

To Reset the Motor *(the motor has to have been programmed to reset it):*

(2-10-2) unplug the power for 2 seconds, plug in for 10, unplug for 2, plug it back in and shade should jog.

Then press the button on the back of the remote and hold it down till the motor jogs twice.



www.fabritecdesigns.com